



Burnisher Troubleshooting

- **Pad is not touching the floor.**
 1. Make sure the pad lever is up. *Tap the foot pedal on the back of the machine to lower the pad.*
 2. If the above does not correct the problem, a tech would be needed.

- **Burnisher is making a loud noise and vibrating.**
 1. Check that the pad is CENTERED on the pad driver.
 2. Check the condition of the pad. *Worn or dirty pads should be replaced as needed.*
 3. If none of the above corrects the problem, a tech would be needed.

- **Burnisher is creating a lot of dust.**
 1. Check the filter bags and replace as needed.
 2. Check the condition of the pad. Worn or dirty pads should be replaced as needed.

- **Pad is not spinning.**
 1. Make sure the pad is DOWN. *Tap the foot pedal on the back of the machine to lower the pad.*
 2. Is the operator turning the grips in order to activate the machine?
 3. If none of the above corrects the problem, a tech would be needed.

- **Burnisher is leaving swirl marks.**
 1. Pad is dirty, check and replace. *Make sure pad is natural fiber and not red.*

- **Reduced run time.**
 1. Pad pressure is too high. Check the pressure meter and adjust the pad pressure lever so the pressure meter stays in the green area
 2. Batteries need to be charged, *make sure they have water as well*