



Charger and Battery Troubleshooting

Charger Problems

1. Is the machine plugged in to the charger properly? (*make sure to use cable from the batteries not the machine*).
2. Does the needle move when plugged in? If not:
 - A) Is it plugged into the right connector?
 - B) Is the charger plugged into the wall outlet?

Chargers will not charge batteries that are dead, it's a safety feature. Batteries must have a little power to take a charge.

Batteries not charging:

1. Check to see how old the batteries are: *most batteries have a date code on them which would be letters and number combination. "letter" would indicate the month (A would be January) the number should be the year.*
2. Check circuit breakers, reset if necessary.
3. Check the water level in batteries. If they are empty:
 - A) Fill battery cells with distilled water, just above metal plates. ***Use battery refill kit***
 - B) Charge overnight. Run the machine the following day to check run time. *Batteries may be dead if they were dry, or is machine has sat for a period of time.*
4. If none of the above corrects the problem, a tech would be needed.